



RT920 OS Flash Guide

Connect the RT920 with computer via the USB cable, then use your finger touch the screen and pull down from the top of the screen, then you can see:

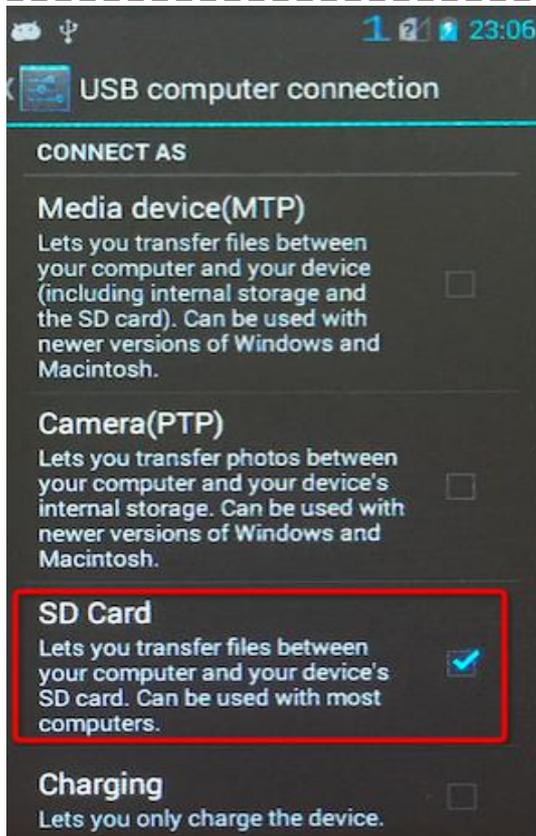

Then copy the **.zip** format OS document RT920_16_OS_EN.zip into the RT920 internal memory, after that, **disconnect** the RT920 with computer, and click: setting > about device > System update > Local update > Achieve > Select the RT920_16_OS_EN.zip, then load it and done.

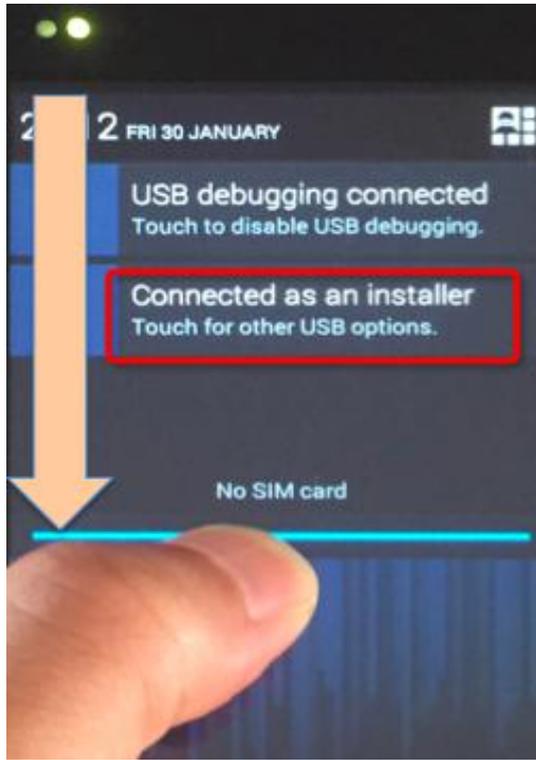