

Fixed Mount Barcode Scanner

RT230H/RT236

User Manual

Table Of Contents

Table Of Contents	2
Chapter 1 Getting Started	10
About This Guide	10
Introduction	10
Barcode Scanning	10
Barcode Programming	11
Factory Defaults	11
Custom Defaults	12
Chapter 2 Communication Interfaces	13
USB HID-KBW	13
USB Country Keyboard Types	13
Beep on Unknown Character	16
Inter-Keystroke Delay	16
Convert Case	17
Emulate ALT+Keypad	18
Function Key Mapping	19
Emulate Numeric Keypad	20
Code Page	20
USB COM Port Emulation	21
Send Data to the RT230H/RT236	21
VID/PID	21
RS232 Interface	22
Baud Rate	23
Parity Check	24
Data Bit	24
Data Bit & Parity Check	25
Stop Bit	25
Chapter 3 Scan Mode	26

Trigger Mode	26
Decode Session Timeout	26
Auto Sleep.....	27
Timeout between Decodes (Same Barcode)	28
Sense Mode.....	29
Decode Session Timeout	29
Image Stabilization Timeout	29
Continue after Good Read	30
Timeout between Decodes (Same Barcode)	30
Sensitivity.....	31
Continuous Mode.....	33
Decode Session Timeout	33
Timeout between Decodes.....	33
Cellphone Read Mode	34
Chapter 4 Scanning Preferences.....	35
Introduction	35
Decode Area	35
Whole Area Decoding.....	35
Central Area Decoding	35
Specify Central Area.....	36
Chapter 5 Illumination & Aiming	37
Illumination.....	37
Aiming.....	38
Chapter 6 Beep & LED Notifications	39
Startup Beep.....	39
Good Read Beep for Non-programming Barcode.....	40
Beep Type.....	40
Beep Volume.....	41
Beep on Unknown Character.....	41
Good Read Beep for Programming Barcode	42
Good Read LED	42
Transmit NGR Message	43
Edit NGR Message.....	43

Chapter 7 Data Formatting	44
General Settings.....	45
Enable/Disable All Prefix/Suffix	45
Prefix Sequences.....	45
Custom Prefix	46
Enable/Disable Custom Prefix	46
Set Custom Prefix.....	46
AIM ID Prefix	47
Code ID Prefix.....	47
Restore All Default Code IDs	47
Modify Code ID	48
Custom Suffix.....	51
Enable/Disable Custom Suffix.....	51
Set Custom Suffix	51
Terminating Character Suffix	52
Enable/Disable Terminating Character Suffix	52
Set Terminating Character Suffix	53
Chapter 8 Symbologies.....	54
General Settings.....	54
Enable/Disable All Symbologies.....	54
Enable/Disable 1D Symbologies	54
Enable/Disable 2D Symbologies	54
Video Reverse	55
1D Symbologies	56
Code 128	56
Restore Factory Defaults.....	56
Enable/Disable Code 128.....	56
Set Length Range for Code 128	56
GS1-128 (UCC/EAN-128).....	57
Restore Factory Defaults.....	57
Enable/Disable GS1-128	57
Set Length Range for GS1-128.....	57
AIM-128	58
Restore Factory Defaults.....	58
Enable/Disable AIM-128.....	58

Set Length Range for AIM-128	58
EAN-8	59
Restore Factory Defaults	59
Enable/Disable EAN-8	59
Transmit Check Digit	60
Add-On Code	60
Add-On Code Required	61
EAN-8 Extension	61
EAN-13	62
Restore Factory Defaults	62
Enable/Disable EAN-13	62
Transmit Check Digit	62
Add-On Code	63
Add-On Code Required	63
ISSN	64
Restore Factory Defaults	64
Enable/Disable ISSN	64
Add-On Code	65
Add-On Code Required	65
ISBN	66
Restore Factory Default	66
Enable/Disable ISBN	66
Set ISBN Format	66
Add-On Code	67
Add-On Code Required	67
UPC-E	68
Restore Factory Defaults	68
Enable/Disable UPC-E	68
Transmit Check Digit	68
Add-On Code	69
Add-On Code Required	69
Transmit System Character "0"	70
UPC-E Extension	70
UPC-A	71
Restore Factory Defaults	71
Enable/Disable UPC-A	71

Transmit Check Digit	71
Add-On Code.....	72
Add-On Code Required	72
Transmit Preamble Character “0”.....	73
Interleaved 2 of 5.....	74
Restore Factory Defaults.....	74
Enable/Disable Interleaved 2 of 5	74
Set Length Range for Interleaved 2 of 5.....	74
Check Digit Verification	75
ITF-14.....	76
ITF-6.....	77
Matrix 2 of 5	78
Restore Factory Defaults.....	78
Enable/Disable Matrix 2 of 5.....	78
Set Length Range for Matrix 2 of 5	78
Check Digit Verification	79
Industrial 2 of 5	80
Restore Factory Defaults.....	80
Enable/Disable Industrial 2 of 5.....	80
Set Length Range for Industrial 2 of 5	80
Check Digit Verification	81
Standard 2 of 5 (IATA 2 of 5)	82
Restore Factory Defaults.....	82
Enable/Disable Standard 25	82
Set Length Range for Standard 25	82
Check Digit Verification	83
Code 39.....	84
Restore Factory Defaults.....	84
Enable/Disable Code 39.....	84
Transmit Start/Stop Character.....	84
Set Length Range for Code 39	85
Check Digit Verification	85
Enable/Disable Code 39 Full ASCII.....	85
Codabar	87
Restore Factory Defaults.....	87
Enable/Disable Codabar	87

Set Length Range for Codabar	87
Check Digit Verification	88
Transmit Start/Stop Character	88
Start/Stop Character Format	89
Code 93.....	90
Restore Factory Defaults.....	90
Enable/Disable Code 93.....	90
Set Length Range for Code 93	90
Check Digit Verification	91
GS1-Databar (RSS).....	92
Restore Factory Defaults.....	92
Enable/Disable GS1 Databar	92
Transmit Application Identifier "01"	92
Code 11.....	93
Restore Factory Defaults.....	93
Enable/Disable Code 11.....	93
Set Length Range for Code 11	93
Transmit Check Digit	94
Check Digit Verification	94
Plessey.....	95
Restore Factory Defaults.....	95
Enable/Disable Plessey.....	95
Set Length Range for Plessey	95
Check Digit Verification	96
MSI-Plessey	97
Restore Factory Defaults.....	97
Enable/Disable MSI-Plessey.....	97
Set Length Range for MSI-Plessey	97
Transmit Check Digit	98
Check Digit Verification	98
2D Symbolologies	99
PDF 417	99
Restore Factory Defaults.....	99
Enable/Disable PDF 417	99
Set Length Range for PDF 417.....	99
PDF 417 Twin Code	100

QR Code.....	101
Restore Factory Defaults.....	101
Enable/Disable QR Code.....	101
Set Length Range for QR Code.....	101
Micro QR.....	101
QR Twin Code.....	102
Data Matrix.....	104
Restore Factory Defaults.....	104
Enable/Disable Data Matrix.....	104
Set Length Range for Data Matrix.....	104
Rectangular Barcode.....	105
Mirror Image.....	105
Data Matrix Twin Code.....	106
Chinese Sensible Code.....	107
Restore Factory Defaults.....	107
Enable/Disable Chinese Sensible Code.....	107
Set Length Range for Chinese Sensible Code.....	107
Chapter 9 Image Control.....	108
Ambient Illumination.....	108
Image Flipping.....	109
Flip.....	110
Flip Vertically.....	110
Flip Horizontally.....	110
Chapter 10 Troubleshooting.....	111
FAQ.....	111
Appendix.....	113
Appendix 1: Factory Defaults Table.....	113
Appendix 2: AIM ID Table.....	121
Appendix 3: Code ID Table.....	123
Appendix 4: ASCII Table.....	124
Appendix 5: Parameter Programming Examples.....	128
a. Program the Decode Session Timeout.....	128
b. Program the Time Period from Idle to Sleep.....	128
c. Program the Image Stabilization Timeout.....	128

d. Program the Timeout between Decodes (Same Barcode)	129
e. Program the Threshold Value of Illumination Change	129
f. Program the Timeout between Decodes	129
g. Program the Central Area	130
h. Program the Custom Prefix/Suffix	130
i. Program the Terminating Character Suffix	130
j. Program the Code ID	131
k. Program the NGR Message	131
l. Program the Length Range (Maximum/Minimum Lengths) for a Symbology	132
m. Program the Code Page	132
Appendix 6: Digit Barcodes (numeric barcodes)	133
Appendix 7: Save/Cancel Barcodes	135
Appendix 8: ASCII Function Key Mapping Table	136
Appendix 9: Code Pages List	138



0006010
Enter Setup

Chapter 1 Getting Started

About This Guide

This guide provides programming instructions for the RT230H/RT236. Users can configure the RT230H/RT236 by scanning the programming barcodes included in this manual.

The RT230H/RT236 has been properly configured for most applications and can be put into use without further configuration. Users may check the **Factory Defaults Table** in **Appendix** for reference. Throughout the manual, asterisks (**) indicate factory default values.

Introduction

Steps to setup the scanner:

Scan the “Enter Setup” > scan setting codes(one or more) > Scan “Exit Setup” setting code

Barcode Scanning

Powered by area-imaging technology and RTscan new technology, the RT230H/RT236 features fast scanning and accurate decoding. Barcodes rotated at any angle can still be read with ease. When scanning a barcode, simply center the aiming beam or pattern projected by the RT230H/RT236 over the barcode.



0006000

** Exit Setup



0006010
Enter Setup

Barcode Programming

Scanning the **Enter Setup** barcode can enable the RT230H/RT236 to enter the setup mode. Then you can scan a number of programming barcodes to configure your RT230H/RT236. To exit the setup mode, scan the **Exit Setup** barcode.

If the RT230H/RT236 has exited the setup mode, only some special programming barcodes, such as the **Enter Setup** barcode and **Restore All Factory Defaults** barcode, can be read.



0006010

Enter Setup



0006000

**** Exit Setup**

Programming barcode data can be transmitted to the Host. Scan the appropriate barcode below to enable or disable the transmission of programming barcode data (i.e. the characters under programming barcode) to the Host.

Restarting the RT230H/RT236 will automatically disable the transmission of programming barcode data to the Host.



0002010

Transmit Programming Barcode Data



0002000

**** Do Not Transmit Programming Barcode Data**

Factory Defaults

Scanning the following barcode can restore the RT230H/RT236 to the factory defaults. See **Appendix 1: Factory Defaults Table** for more information.

Note: Use this feature with discretion.



0006000

**** Exit Setup**



0006010
Enter Setup



0001000
Restore All Factory Defaults

Custom Defaults

Custom defaults make it possible to save the frequently-used settings on the RT230H/RT236.

Scanning the **Save as Custom Defaults** barcode can save the current settings as custom defaults. Once custom default settings are stored, they can be recovered at any time by scanning the **Restore All Custom Defaults** barcode.

Custom defaults are stored in the non-volatile memory. Restoring the RT230H/RT236 to the factory defaults will not remove the custom defaults from the RT230H/RT236.



0001150
Save as Custom Defaults



0001160
Restore All Custom Defaults



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 2 Communication Interfaces

The RT230H/RT236 provides USB HID-KBW, or USB-Virtual Com, or RS232 interface to communicate with the host device. Different interface matches relevant/corresponding cable, the cable is fixed on the scanner and it is not changeable.

USB HID-KBW



1100020

**** USB HID-KBW**

When you enable the **USB HID-KBW** mode, the scanner's transmission will be simulated as USB keyboard input. The Host receives keystrokes on the virtual keyboard. It works on a Plug and Play basis and no driver is required.

USB Country Keyboard Types

Keyboard layouts vary from country to country. The default setting is U.S. keyboard.



1103001

**** U.S.**



1103002

Japan



1103003

Denmark



1103004

Finland



0006000
**** Exit Setup**



0006010
Enter Setup



1103005

France



1103006

Turkey_F



1103007

Italy



1103008

Norway



0006000
**** Exit Setup**



0006010
Enter Setup



1103222

Spain



1103226

Turkey_Q



1103227

UK



1103209

Austria, Germany



1103202

Belgium



1103220

Russia



1103223

Sweden



1103218

Portugal



0006000
**** Exit Setup**



0006010
Enter Setup

Beep on Unknown Character

Due to the differences in keyboard layouts, some characters contained in barcode data may be unavailable on the selected keyboard. As a result, the RT230H/RT236 fails to transmit the unknown characters.

Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.



1103031

Beep on Unknown Character



1103030

**** Do Not Beep on Unknown Character**

Inter-Keystroke Delay

This parameter specifies the delay between emulated keystrokes.



1103050

**** No Delay**



1103051

Short Delay (20ms)



1103052

Long Delay (40ms)



0006000

**** Exit Setup**



0006010
Enter Setup

Convert Case

Scan the appropriate barcode below to convert barcode data to your desired case.



1103040

**** No Case Conversion**



1103043

Invert Upper and Lower Case Characters



1103041

Convert All to Upper Case



1103042

Convert All to Lower Case

Example: When the **Convert All to Lower Case** feature is enabled, barcode data “AbC” is transmitted as “abc”.



0006000
**** Exit Setup**



0006010
Enter Setup

Emulate ALT+Keypad

This feature allows any ASCII character (0x00 - 0xFF) to be sent over the numeric keypad no matter which keyboard type is selected. Since sending a character involves multiple keystroke emulations, this method appears less efficient.

The following options are available:

- **Disable:** No ASCII character is sent in the ALT+Keypad way.
- **Mode 1:** ASCII characters not supported by the selected keyboard type but falling into 0x20~0xFF are sent in the ALT+Keypad way.
- **Mode 2:** ASCII characters falling into 0x20~0xFF are sent in the ALT+Keypad way.
- **Mode 3:** All ASCII characters (0x00~0xFF) are sent in the ALT+Keypad way.

Note: In the event of a conflict between **Function Key Mapping** and **Mode 3, Function Key Mapping** shall govern.



** Disable



Mode 1



Mode 2



Mode 3

Example: Supposing US keyboard is selected, barcode data "AÐF" (65/208/70) is sent as below:

(1) **Mode 1** is enabled:

"A" -- Keystroke "A"

"Ð" -- "ALT Make" + "208" + "ALT Break"

"F" -- Keystroke "F"

(2) **Mode 3** is enabled:

"A" -- "ALT Make" + "065" + "ALT Break"

"Ð" -- "ALT Make" + "208" + "ALT Break"

"F" -- "ALT Make" + "070" + "ALT Break"



0006000
** Exit Setup



0006010
Enter Setup

Function Key Mapping

When Function Key Mapping is enabled, function characters (0x00 - 0x1F) are sent as ASCII sequences over the keypad. For more information, see **Appendix 8: ASCII Function Key Mapping Table**.



1103140

 
Enable Function Key Mapping



1103130

**** Disable Function Key Mapping**

Example: Barcode data 0x16

 T	Enable Function Key Mapping	Ctrl+V
	Disable Function Key Mapping	F1



0006000
**** Exit Setup**




0006010
Enter Setup

Emulate Numeric Keypad

When this feature is disabled, sending barcode data is emulated as keystroke(s) on main keyboard.

To enable this feature, scan the **Emulate Numeric Keypad** barcode. Sending a number (0-9) is emulated as keystroke(s) on numeric keypad, whereas sending other characters like “+”, “_”, “*”, “/” and “.” is still emulated as keystrokes on main keyboard.

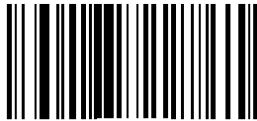

**** Do Not Emulate Numeric Keypad**



Emulate Numeric Keypad

Code Page

In order to support more international characters, the **Code Page** programming feature is provided. This feature is only effective when ASCII characters are sent in the ALT+Keypad way. Programming a code page requires scanning numeric barcode (For more information, see **Appendix 9: Code Pages List**). The default code page is Windows 1252 (Latin I). To learn how to program it, see **Appendix 5**.



Set the Code Page



0006000
**** Exit Setup**



0006010
Enter Setup

USB COM Port Emulation



1100060

USB COM Port Emulation

Scan this setting code to enable the RT230H/RT236 with the **USB COM Port Emulation** mode, this interface allows the Host to receive data in the way as a serial port does. A driver is required for this feature.

Send Data to the RT230H/RT236

This output report is used to send data to the device. All programming commands can be used.

	Bit							
Byte	7	6	5	4	3	2	1	0
0	Report ID = 0x04							
1	Length of the output data							
2-63	Output data (1-62)							

VID/PID

USB uses VID (Vendor ID) and PID (Product ID) to identify and locate a device. The VID is assigned by USB Implementers Forum. RTscan's vendor ID is 1EAB (Hex). A PID is assigned to each interface.

Product	Interface	PID (Hex)	PID (Dec)
RT230H/RT236	USB HID-KBW	1303	4867
	USB COM Port Emulation	1306	4870



0006000
** Exit Setup



0006010
Enter Setup

RS232 Interface

RS232 Serial communication interface is usually used when connecting the scanner to a host device (like PC, POS) which with RS232 port. However, to ensure smooth communication and accuracy of data, you need to set communication parameters (including baud rate, parity check, data bit and stop bit) to match the host device.

Default serial communication parameters are listed below. Make sure all parameters match the host requirements.

Parameter	Factory Default
Serial Communication	Standard RS232
Baud Rate	9600
Parity Check	None
Data Bits	8
Stop Bits	1
Hardware Flow Control	None



0006000
**** Exit Setup**



0006010

Enter Setup

Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the Host requirements.



0100030

**** 9600**

0100000

1200

0100050

19200

0100010

2400

0100060

38400

0100020

4800

0100070

57600

0100040

14400

0100080

115200

0006000

**** Exit Setup**



0006010
Enter Setup

Parity Check

When the number of data bits is set to 7, you can only select either **Even Parity** or **Odd Parity**. The **None** option will be regarded as **Even Parity** in this case.



0101000
**** None**



0101010
Even Parity



0101020
Odd Parity

Data Bit

When the number of data bits is set to 7, you can only select either **Even Parity** or **Odd Parity**.



0103020
7 Data Bits



0103030
**** 8 Data Bits**



0006000
**** Exit Setup**



0006010
Enter Setup

Data Bit & Parity Check



0105010

7 Data Bits/Even Parity



0105020

7 Data Bits/Odd Parity



0105030

**** 8 Data Bits/ No Parity**



0105040

8 Data Bits/Even Parity



0105050

8 Data Bits/Odd Parity

Stop Bit



0102000

**** 1 Stop Bit**



0102010

2 Stop Bits



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 3 Scan Mode

Trigger Mode

If the Trigger Mode is enabled, press the trigger to activate a decode session. The session continues until the barcode is decoded or decode session timeout expires or the active trigger signal is no longer present. For good read, the RT230H/RT236 transmits decoded data via communication port.



0302000
Trigger Mode

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 0ms to 3,600,000ms. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



0313000
Decode Session Timeout



0006000
**** Exit Setup**

0006010
Enter Setup

Auto Sleep

Auto Sleep allows the RT230H/RT236 in the Trigger Mode to automatically enter the sleep or low power mode if no operation or communication is performed for a time period (user programmable). When the RT230H/RT236 is in the sleep mode, press the trigger or communication from the Host can awake the RT230H/RT236. The RT230H/RT236 returns to full operation within 100ms.



0313060

**** Enable Auto Sleep**

0313070

Disable Auto Sleep

The parameter below specifies how long the RT230H/RT236 remains idle (no operation or communication occurs) before it is put into sleep mode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 500ms. To learn how to program this parameter, see **Appendix 5**.



0313050

Time Period from Idle to Sleep0006000
**** Exit Setup**



0006010
Enter Setup

Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

To enable/disable the Timeout between Decodes (Same Barcode), scan the appropriate barcode below.

Enable Timeout between Decodes: Do not allow the RT230H/RT236 to re-read same barcode before the timeout between decodes (same barcode) expires.

Disable Timeout between Decodes: Allow the RT230H/RT236 to re-read same barcode.



**** Disable Timeout between Decodes**



Enable Timeout between Decodes

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.

To learn how to program this parameter, see **Appendix 5**.



Timeout between Decodes (Same Barcode)



0006000
**** Exit Setup**



0006010
Enter Setup

Sense Mode

If the Sense Mode is enabled, the RT230H/RT236 activates a decode session every time it detects a change in ambient illumination. The decode session continues until the barcode is decoded or the decode session timeout expires.

Under Sense Mode, if we press the trigger button, the RT230H/RT236 will go to sleep mode and stop working. press trigger button again to wake it up.



0302010

Sense Mode

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. If the timeout expires or the barcode is decoded, the RT230H/RT236 goes back to monitoring ambient illumination. It is programmable in 1ms increments from 0ms to 3,600,000ms. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



0313000

Decode Session Timeout

Image Stabilization Timeout

The image stabilization timeout is programmable in 1ms increments from 0ms to 1,600ms. The default setting is 500ms. To learn how to program this parameter, see **Appendix 5**.



0313120

Image Stabilization Timeout



0006000
** Exit Setup



0006010
Enter Setup

Continue after Good Read

Continue after Good Read: The RT230H/RT236 starts next decode session after good read.

Pause after Good Read: The RT230H/RT236 starts another round of illumination monitoring and image stabilization after good read.



0313130

**** Pause after Good Read**



0313131

Continue after Good Read

Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

To enable/disable the Timeout between Decodes (Same Barcode), scan the appropriate barcode below.

Enable Timeout between Decodes: Do not allow the RT230H/RT236 to re-read same barcode before the timeout between decodes (same barcode) expires.

Disable Timeout between Decodes: Allow the RT230H/RT236 to re-read same barcode.



0313020

**** Disable Timeout between Decodes**



0313030

Enable Timeout between Decodes



0006000

**** Exit Setup**



0006010
Enter Setup

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.

To learn how to program this parameter, see **Appendix 5**.



0313010

Timeout between Decodes (Same Barcode)

Sensitivity

Sensitivity specifies the degree of acuteness of the RT230H/RT236's response to changes in ambient illumination. The higher the sensitivity, the lower requirement in illumination change to trigger the RT230H/RT236. You can select an appropriate degree of sensitivity that fits the ambient environment.



0312010

Medium Sensitivity



0312000

Low Sensitivity



0312020

High Sensitivity



0312030

Enhanced Sensitivity



0006000
** Exit Setup



0006010

Enter Setup

If the above four options fail to meet your needs, you may program the threshold value of illumination change.

Illumination changes that reaches or surpasses the predefined threshold value will cause the RT230H/RT236 to start a decode session. The lower the threshold value, the greater the sensitivity of the RT230H/RT236. The default threshold value is 2.

To learn how to program this parameter, see **Appendix 5**.



0312040

Threshold Value of Illumination Change (1-20)

0006000

**** Exit Setup**

0006010
Enter Setup

Continuous Mode

This mode enables the RT230H/RT236 to scan/capture, decode and transmit over and over again.

When the RT230H/RT236 is operating in Continuous Mode, barcode reading can be suspended/resumed through the trigger button. Press the trigger button to stop continuous scanning, press again to resume barcode reading.



0302020

Continuous Mode

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 0ms to 3,600,000ms. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



0313000

Decode Session Timeout

Timeout between Decodes

This parameter sets the timeout between decode sessions. When a decode session ends, next session will not happen until the timeout between decodes expires. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,000ms. To learn how to program this parameter, see **Appendix 5**.



0313040

Timeout between Decodes0006000
**** Exit Setup**



0006010
Enter Setup

Cellphone Read Mode



0313140

****Disable Cellphone Read Mode**



0313142

Enable Cellphone Read Mode



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 4 Scanning Preferences

Introduction

This chapter contains information as to how to adapt your RT230H/RT236 to various applications with preference setting. For instance, to narrow the field of view of the RT230H/RT236 to make sure it reads only those barcodes intended by the user.

Decode Area

Whole Area Decoding

When this option is enabled, the RT230H/RT236 attempts to decode barcode(s) within its field of view, from the center to the periphery, and transmits the barcode that has been first decoded.



0322000
**** Whole Area Decoding**

Central Area Decoding

The RT230H/RT236 attempts to decode barcode(s) within a specified central area and transmits the barcode that has been first decoded. This option allows the RT230H/RT236 to narrow its field of view to make sure it reads only those barcodes intended by the user. For instance, if multiple barcodes are placed closely together, central area decoding in conjunction with appropriate pre-defined central area will insure that only the desired barcode is read.



0322010
Central Area Decoding




0006000
**** Exit Setup**



0006010
Enter Setup

Specify Central Area

The default central area is a (Width*20%) by (Height*20%) area in the center of the RT230H/RT236's field of view, as shown in the figure below. You can define the central area by scanning the **Specify Central Area** barcode and numeric barcode(s) corresponding to a desired percentage (1-100). If Central Area Decoding is enabled by scanning the **Central Area Decoding** barcode, the RT230H/RT236 only reads barcodes that intersect the predefined central area.

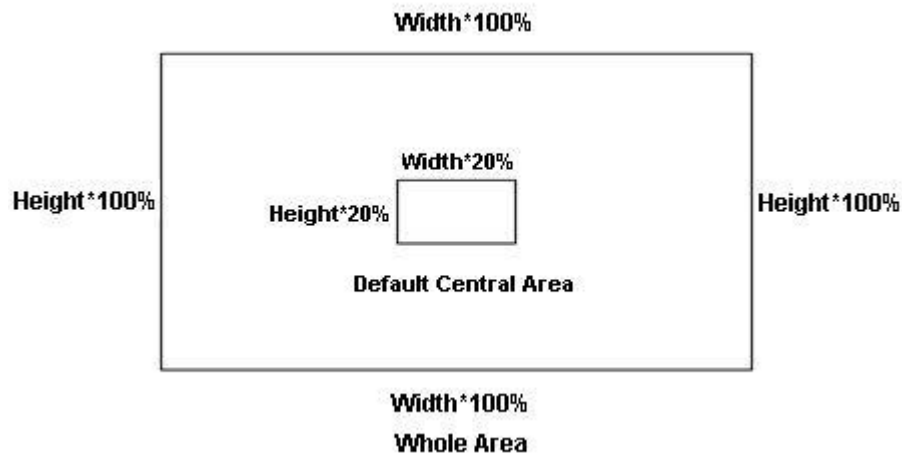

To learn how to program this parameter, see the “**Appendix 5: Parameter Programming Examples**”.



0322020
Specify Central Area



0006000
** Exit Setup



0006010
Enter Setup

Chapter 5 Illumination & Aiming

Illumination

A couple of illumination options are provided to improve the lighting conditions during every image capture:

Normal: Illumination LEDs are turned on during image capture.

Always ON: Illumination LEDs keep ON after the RT230H/RT236 is powered on.

OFF: Illumination LEDs are OFF all the time.



0200000

**** Normal**



0200020

OFF



0200010

Always ON



0006000

**** Exit Setup**



0006010
Enter Setup

Aiming

When scanning/capturing image, the RT230H/RT236 projects an aiming pattern which allows positioning the target barcode within its field of view and thus makes decoding easier.

Normal: The RT230H/RT236 projects an aiming pattern only during barcode scanning/capture.

Always ON: Aiming pattern is constantly ON after the RT230H/RT236 is powered on.

OFF: Aiming pattern is OFF all the time.



0201000

**** Normal**



0201020

OFF



0201010

Always ON



0006000

**** Exit Setup**



0006010
Enter Setup

Chapter 6 Beep & LED Notifications

Startup Beep

If startup beep is enabled, the RT230H/RT236 will beep after being turned on.



0204001

**** Enable Startup Beep**



0204000

Disable Startup Beep



0006000
**** Exit Setup**



0006010
Enter Setup

Good Read Beep for Non-programming Barcode

The RT230H/RT236 can provide a PWM output to an external driver circuit to drive a beeper after decoding a non-programming barcode. Scan the appropriate barcode below to enable or disable the emission of good read beep. Beep type (frequency) and volume are also user programmable.



0203010

**** Good Read Beep On for Non-programming Barcode**



0203000

Good Read Beep Off for Non-programming Barcode

Beep Type



0203020

Type 1



0203022

**** Type 3**



0203021

Type 2



0006000

**** Exit Setup**



0006010
Enter Setup

Beep Volume



0203030

**** Loud**



0203032

Low



0203031

Medium

Beep on Unknown Character

Due to the differences in keyboard layouts, some characters contained in barcode data may be unavailable on the selected keyboard (USB HID-KBW). As a result, the RT230H/RT236 fails to transmit the unknown characters.

Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.



1103031

Beep on Unknown Character



1103030

**** Do Not Beep on Unknown Character**



0006000
**** Exit Setup**



0006010
Enter Setup

Good Read Beep for Programming Barcode



0203041

**** Good Read Beep On for Programming Barcode**



0203040

Good Read Beep Off for Programming Barcode

Good Read LED



0206011

**** Good Read LED ON**



0206010

Good Read LED OFF



0006000
**** Exit Setup**



0006010
Enter Setup

Transmit NGR Message

Scan a barcode below to select whether or not to transmit a user-defined NGR (Not Good Read) message when a barcode is not decoded.



0320010
Transmit NGR Message



0320000
**** Do Not Transmit NGR Message**

Edit NGR Message

To edit an NGR message, scan the **Edit NGR Message** barcode and the numeric barcodes (see Appendix 6: Digit Barcodes (numeric barcodes)) corresponding to the ASCII values (decimal) of desired characters and then scan the **Save** barcode (see Appendix 7: Save/Cancel Barcodes).

An NGR message can contain 0-7 characters (ASCII value of character: 0-255).



0320020
Edit NGR Message



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 7 Data Formatting

In many applications, barcode data needs to be edited and distinguished from one another.

Usually AIM ID and Code ID can be used as identifiers, but in some special cases customized prefix and terminating character suffix like Carriage Return or Line Feed can also be the alternatives.

Data formatting may include:

- ✧ Append AIM ID/Code ID/custom prefix before the decoded data
- ✧ Append custom suffix after the decoded data
- ✧ Append terminating character to the end of the data

The following formats can be used when editing barcode data:

- ✧ [Code ID] + [Custom Prefix] + [AIM ID] + [DATA] + [Custom Suffix] + [Terminating Character]
- ✧ [Custom Prefix] + [Code ID] + [AIM ID] + [DATA] + [Custom Suffix] + [Terminating Character]



0006000
** Exit Setup



0006010
Enter Setup

General Settings

Enable/Disable All Prefix/Suffix

Disable All Prefix/Suffix: Transmit barcode data with no prefix/suffix.

Enable All Prefix/Suffix: Allow user to append Code ID prefix, AIM ID prefix, custom prefix/suffix and terminating character to the barcode data before the transmission.



0311010

Enable All Prefix/Suffix



0311000

Disable All Prefix/Suffix

Prefix Sequences



0317010

Code ID+Custom Prefix+AIM ID



0317040

**** Custom Prefix+Code ID+AIM ID**



0006000
**** Exit Setup**



0006010
Enter Setup

Custom Prefix

Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 10 characters.



0305010

Enable Custom Prefix



0305000

** Disable Custom Prefix

Set Custom Prefix

To set a custom prefix, scan the **Set Custom Prefix** barcode and the numeric barcodes representing the hexadecimal values of a desired prefix and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of characters.

Note: A custom prefix cannot exceed 11 characters.



0300000

Set Custom Prefix

Example: Set the custom prefix to “CODE”

1. Check the hex values of “CODE” in the ASCII Table. (“CODE”: 43, 4F, 44, 45)
2. Scan the **Enter Setup** barcode.
3. Scan the **Set Custom Prefix** barcode.
4. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode.



0006000

** Exit Setup



0006010
Enter Setup

AIM ID Prefix

AIM (Automatic Identification Manufacturers) IDs and ISO/IEC 15424 standards define symbology identifiers and data carrier identifiers. (For the details, see the “**Appendix 2: AIM ID Table**” section). If AIM ID prefix is enabled, the RT230H/RT236 will add the symbology identifier before the scanned data after decoding.



Enable AIM ID Prefix



** Disable AIM ID Prefix

Code ID Prefix

Code ID can also be used to identify barcode type. Unlike AIM ID, Code ID is user programmable. Code ID can only consist of one or two English letters.



Enable Code ID Prefix



** Disable Code ID Prefix

Restore All Default Code IDs

For the information of default Code IDs, see the “**Appendix 3: Code ID Table**” section.



Restore All Default Code IDs



0006000
** Exit Setup



0006010
Enter Setup

Modify Code ID

Code ID of each symbology can be programmed separately. See the following example to learn how to program a Code ID.

Example: Set the Code ID of PDF417 to “p”

1. Check the hex value of “p” in the ASCII Table. (“p”: 70)
2. Scan the **Enter Setup** barcode.
3. Scan the **Modify PDF417 Code ID** barcode.
4. Scan the numeric barcodes “7” and “0”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode.



0005000
Modify PDF417 Code ID



0005030
Modify Data Matrix Code ID



0005010
Modify QR Code Code ID



0005070
Modify Chinese Sensible Code ID



0004020
Modify Code 128 Code ID



0004030
Modify GS1-128 Code ID



0006000
** Exit Setup



0006010
Enter Setup



0004210
Modify AIM-128 Code ID



0004040
Modify EAN-8 Code ID



0004050
Modify EAN-13 Code ID



0004060
Modify UPC-E Code ID



0004070
Modify UPC-A Code ID



0004240
Modify ISBN Code ID



0004230
Modify ISSN Code ID



0004130
Modify Code 39 Code ID



0004170
Modify Code 93 Code ID



0004080
Modify Interleaved 2 of 5 Code ID



0006000
**** Exit Setup**



0006010
Enter Setup



0004090
Modify ITF-14 Code ID



0004100
Modify ITF-6 Code ID



0004150
Modify Codabar Code ID



0004250
Modify Industrial 25 Code ID



0004260
Modify Standard 25 Code ID



0004110
Modify Matrix 25 Code ID



0004220
Modify COOP 25 Code ID



0004280
Modify Code 11 Code ID



0004270
Modify Plessey Code ID



0004290
Modify MSI/Plessey Code ID



0004310
Modify GS1 Databar Code ID



0006000
**** Exit Setup**



0006010
Enter Setup

Custom Suffix

Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 10 characters.



0306010

Enable Custom Suffix



0306000

** Disable Custom Suffix

Set Custom Suffix

To set a custom suffix, scan the **Set Custom Suffix** barcode and the numeric barcodes representing the hexadecimal values of a desired suffix and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of characters.

Note: A custom suffix cannot exceed 11 characters.



0301000

Set Custom Suffix

Example: Set the custom suffix to “CODE”

1. Check the hex values of “CODE” in the ASCII Table. (“CODE”: 43, 4F, 44, 45)
2. Scan the **Enter Setup** barcode.
3. Scan the **Set Custom Suffix** barcode.
4. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode.



0006000
** Exit Setup



0006010
Enter Setup

Terminating Character Suffix

A terminating character can be used to mark the end of data, which means nothing can be added after it.

A terminating character suffix can contain one or two characters.

Enable/Disable Terminating Character Suffix

To enable/disable terminating character suffix, scan the appropriate barcode below.



0309010

**** Enable Terminating Character Suffix**



0309000

Disable Terminating Character Suffix



0006000
**** Exit Setup**



Set Terminating Character Suffix

The RT230H/RT236 provides a shortcut for setting the terminating character suffix to CR (0x0D) or CRLF (0x0D,0x0A) and enabling it by scanning the appropriate barcode below.



**** Terminating Character CR (0x0D)**



Terminating Character CRLF (0x0D,0x0A)

To set a terminating character suffix, scan the **Set Terminating Character Suffix** barcode and the numeric barcodes representing the hexadecimal value of a desired terminating character and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of terminating characters.

Note: A terminating character suffix cannot exceed 7 characters.



Set Terminating Character Suffix

Example: Set the terminating character suffix to 0x0D

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Terminating Character Suffix** barcode.
3. Scan the numeric barcodes "0" and "D".
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode.





0006010
Enter Setup

Chapter 8 Symbologies

General Settings

Enable/Disable All Symbologies

If the **Disable All Symbologies** feature is enabled, the RT230H/RT236 will not be able to read any non-programming barcodes except the programming barcodes.



0001020
Enable All Symbologies



0001010
Disable All Symbologies

Enable/Disable 1D Symbologies

If the **Disable 1D Symbologies** feature is enabled, the RT230H/RT236 will not be able to read any 1D barcodes.



0001040
Enable 1D Symbologies



0001030
Disable 1D Symbologies

Enable/Disable 2D Symbologies

If the **Disable 2D Symbologies** feature is enabled, the RT230H/RT236 will not be able to read any 2D barcodes.



0006000
** Exit Setup



0006010
Enter Setup



0001060
Enable 2D Symbologies




0001050
Disable 2D Symbologies

Video Reverse


Regular barcode: Dark image on a bright background.

Inverse barcode: Bright image on a dark background.

The examples of regular barcode and inverse barcode are shown below.

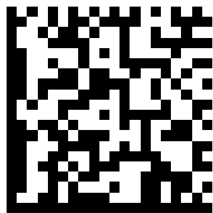

Regular Barcode

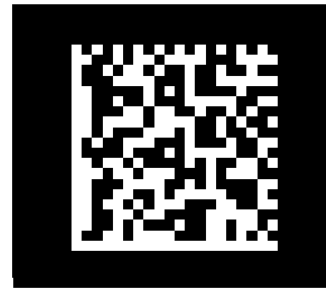

Inverse Barcode

Video Reverse allows the RT230H/RT236 to read barcodes that are inverted.

Video Reverse ON: Read both regular barcodes and inverse barcodes.

Video Reverse OFF: Read regular barcodes only.

The RT230H/RT236 shows a slight decrease in scanning speed when Video Reverse is ON.



0001021
Video Reverse ON



0001011
** Video Reverse OFF



0006000
** Exit Setup



0006010
Enter Setup

1D Symbologies

Code 128

Restore Factory Defaults



0400000

Restore the Factory Defaults of Code 128

Enable/Disable Code 128



0400020

**** Enable Code 128**



0400010

Disable Code 128

Set Length Range for Code 128



0400030

Set the Minimum Length



0400040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

GS1-128 (UCC/EAN-128)

Restore Factory Defaults



0412000

Restore the Factory Defaults of GS1-128

Enable/Disable GS1-128



0412020

** Enable GS1-128



0412010

Disable GS1-128

Set Length Range for GS1-128



0412030

Set the Minimum Length



0412040

Set the Maximum Length



0006000
** Exit Setup



0006010
Enter Setup

AIM-128

Restore Factory Defaults



0423000

Restore the Factory Defaults of AIM-128

Enable/Disable AIM-128



0423020

**** Enable AIM-128**



0423010

Disable AIM-128

Set Length Range for AIM-128



0423030

Set the Minimum Length



0423040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

EAN-8

Restore Factory Defaults



0401000

Restore the Factory Defaults of EAN-8

Enable/Disable EAN-8



0401020

**** Enable EAN-8**



0401010

Disable EAN-8



0006000
**** Exit Setup**



0006010
Enter Setup

Transmit Check Digit

EAN-8 is 8 digits in length with the last one as its check digit used to verify the integrity of the data.



0401040

** Transmit EAN-8 Check Digit



0401030

Do Not Transmit EAN-8 Check Digit

Add-On Code

An EAN-8 barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-8 barcode while the part circled by red dotted line is add-on code.



0401060

Enable 2-Digit Add-On Code



0401050

** Disable 2-Digit Add-On Code



0401080

Enable 5-Digit Add-On Code



0401070

** Disable 5-Digit Add-On Code

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The RT230H/RT236 decodes a mix of EAN-8 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The RT230H/RT236 decodes EAN-8 and ignores the add-on code when presented with an EAN-8 plus add-on barcode. It can also decode EAN-8 barcodes without add-on codes.



0006000
** Exit Setup



0006010
Enter Setup

Add-On Code Required

When **EAN-8 Add-On Code Required** is selected, the RT230H/RT236 will only read EAN-8 barcodes that contain add-on codes.



0401110

EAN-8 Add-On Code Required



0401120

**** EAN-8 Add-On Code Not Required**

EAN-8 Extension

Disable EAN-8 Zero Extend: Transmit EAN-8 barcodes as is.

Enable EAN-8 Zero Extend: Add five leading zeros to decoded EAN-8 barcodes to extend to 13 digits.



0401100

Enable EAN-8 Zero Extend



0401090

**** Disable EAN-8 Zero Extend**



0006000
**** Exit Setup**



0006010
Enter Setup

EAN-13

Restore Factory Defaults



0402000

Restore the Factory Defaults of EAN-13

Enable/Disable EAN-13



0402020

**** Enable EAN-13**



0402010

Disable EAN-13

Transmit Check Digit



0402040

**** Transmit EAN-13 Check Digit**



0402030

Do Not Transmit EAN-13 Check Digit



0006000

**** Exit Setup**



0006010
Enter Setup

Add-On Code

An EAN-13 barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0402060

Enable 2-Digit Add-On Code



0402050

**** Disable 2-Digit Add-On Code**



0402080

Enable 5-Digit Add-On Code



0402070

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The RT230H/RT236 decodes a mix of EAN-13 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The RT230H/RT236 decodes EAN-13 and ignores the add-on code when presented with an EAN-13 plus add-on barcode. It can also decode EAN-13 barcodes without add-on codes.

Add-On Code Required

When **EAN-13 Add-On Code Required** is selected, the RT230H/RT236 will only read EAN-13 barcodes that contain add-on codes.



0402090

EAN-13 Add-On Code Required



0402100

**** EAN-13 Add-On Code Not Required**



0006000
**** Exit Setup**



0006010
Enter Setup

ISSN

Restore Factory Defaults



0421000

Restore the Factory Defaults of ISSN

Enable/Disable ISSN



0421020

Enable ISSN



0421010

**** Disable ISSN**



0006000

**** Exit Setup**



0006010
Enter Setup

Add-On Code

An ISSN barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0421030

Enable 2-Digit Add-On Code



0421040

**** Disable 2-Digit Add-On Code**



0421050

Enable 5-Digit Add-On Code



0421060

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The RT230H/RT236 decodes a mix of ISSN barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The RT230H/RT236 decodes ISSN and ignores the add-on code when presented with an ISSN plus add-on barcode. It can also decode ISSN barcodes without add-on codes.

Add-On Code Required

When **ISSN Add-On Code Required** is selected, the RT230H/RT236 will only read ISSN barcodes that contain add-on codes.



0421070

ISSN Add-On Code Required



0421080

**** ISSN Add-On Code Not Required**



0006000
**** Exit Setup**



0006010
Enter Setup

ISBN

Restore Factory Default



0416000

Restore the Factory Defaults of ISBN

Enable/Disable ISBN



0416020

**** Enable ISBN**



0416010

Disable ISBN

Set ISBN Format



0416030

**** ISBN-13**



0416040

ISBN-10



0006000

**** Exit Setup**



0006010
Enter Setup

Add-On Code

An ISBN barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0416050

Enable 2-Digit Add-On Code



0416060

**** Disable 2-Digit Add-On Code**



0416070

Enable 5-Digit Add-On Code



0416080

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The RT230H/RT236 decodes a mix of ISBN barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The RT230H/RT236 decodes ISBN and ignores the add-on code when presented with an ISBN plus add-on barcode. It can also decode ISBN barcodes without add-on codes.

Add-On Code Required

When **ISBN Add-On Code Required** is selected, the RT230H/RT236 will only read ISBN barcodes that contain add-on codes.



0416090

ISBN Add-On Code Required



0416100

**** ISBN Add-On Code Not Required**



0006000
**** Exit Setup**



0006010
Enter Setup

UPC-E

Restore Factory Defaults



0403000

Restore the Factory Defaults of UPC-E

Enable/Disable UPC-E



0403020

**** Enable UPC-E**



0403010

Disable UPC-E

Transmit Check Digit



0403040

**** Transmit UPC-E Check Digit**



0403030

Do Not Transmit UPC-E Check Digit



0006000

**** Exit Setup**



0006010
Enter Setup

Add-On Code

A UPC-E barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0403060

Enable 2-Digit Add-On Code



0403050

**** Disable 2-Digit Add-On Code**



0403080

Enable 5-Digit Add-On Code



0403070

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The RT230H/RT236 decodes a mix of UPC-E barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The RT230H/RT236 decodes UPC-E and ignores the add-on code when presented with a UPC-E plus add-on barcode. It can also decode UPC-E barcodes without add-on codes.

Add-On Code Required

When **UPC-E Add-On Code Required** is selected, the RT230H/RT236 will only read UPC-E barcodes that contain add-on codes.



0403130

UPC-E Add-On Code Required



0403140

**** UPC-E Add-On Code Not Required**



0006000
**** Exit Setup**



0006010
Enter Setup

Transmit System Character “0”

The first character of UPC-E barcode is the system character “0”.



0403100

**** Transmit System Character “0”**



0403090

Do Not Transmit System Character “0”

UPC-E Extension

Disable UPC-E Extend: Transmit UPC-E barcodes as is.

Enable UPC-E Extend: Extend UPC-E barcodes to make them compatible in length to UPC-A.



0403120

Enable UPC-E Extend



0403110

**** Disable UPC-E Extend**



0006000
**** Exit Setup**



0006010
Enter Setup

UPC-A

Restore Factory Defaults



0404000

Restore the Factory Defaults of UPC-A

Enable/Disable UPC-A



0404020

**** Enable UPC-A**



0404010

Disable UPC-A

Transmit Check Digit



0404040

**** Transmit UPC-A Check Digit**



0404030

Do Not Transmit UPC-A Check Digit



0006000
**** Exit Setup**



0006010
Enter Setup

Add-On Code

A UPC-A barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0404060

Enable 2-Digit Add-On Code



0404050

**** Disable 2-Digit Add-On Code**



0404080

Enable 5-Digit Add-On Code



0404070

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The RT230H/RT236 decodes a mix of UPC-A barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The RT230H/RT236 decodes UPC-A and ignores the add-on code when presented with a UPC-A plus add-on barcode. It can also decode UPC-A barcodes without add-on codes.

Add-On Code Required

When **UPC-A Add-On Code Required** is selected, the RT230H/RT236 will only read UPC-A barcodes that contain add-on codes.



0404110

UPC-A Add-On Code Required



0404120

**** UPC-A Add-On Code Not Required**



0006000

**** Exit Setup**



0006010
Enter Setup

Transmit Preamble Character "0"



0404100

Transmit Preamble Character "0"



0404090

**** Do not Transmit Preamble Character "0"**

Note: The preamble character "0" usually does not appear in printed UPC-A barcodes.



0006000
**** Exit Setup**



0006010
Enter Setup

Interleaved 2 of 5

Restore Factory Defaults



0405000

Restore the Factory Defaults of Interleaved 2 of 5

Enable/Disable Interleaved 2 of 5



0405020

**** Enable Interleaved 2 of 5**



0405010

Disable Interleaved 2 of 5

Set Length Range for Interleaved 2 of 5



0405030

Set the Minimum Length



0405040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

Check Digit Verification

A check digit is optional for Interleaved 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The RT230H/RT236 transmits Interleaved 2 of 5 barcodes as is.

Do Not Transmit Check Digit After Verification: The RT230H/RT236 checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The RT230H/RT236 checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



0405050

**** Disable**



0405060

Do Not Transmit Check Digit After Verification



0405070

Transmit Check Digit After Verification



0006000
**** Exit Setup**



0006010
Enter Setup

ITF-14

ITF-14 is a special kind of Interleaved 2 of 5 with a length of 14 characters and the last character as the check digit.



0405260

Restore the Factory Defaults of ITF-14



0405080

Disable ITF-14



0405090

**** Enable ITF-14 But Do Not Transmit Check Digit**



0405100

Enable ITF-14 and Transmit Check Digit

Note: It is advisable not to enable ITF-14 and Interleaved 2 of 5 at the same time.



0006000
**** Exit Setup**



0006010
Enter Setup

ITF-6

ITF-6 is a special kind of Interleaved 2 of 5 with a length of 6 characters and the last character as the check digit.



0405270

Restore the Factory Defaults of ITF-6



0405110

**** Disable ITF-6**



0405120

Enable ITF-6 But Do Not Transmit Check Digit



0405130

Enable ITF-6 and Transmit Check Digit

Note: It is advisable not to enable ITF-6 and Interleaved 2 of 5 at the same time.



0006000
**** Exit Setup**



0006010
Enter Setup

Matrix 2 of 5

Restore Factory Defaults



0406000

Restore the Factory Defaults of Matrix 2 of 5

Enable/Disable Matrix 2 of 5



0406020

Enable Matrix 2 of 5



0406010

**** Disable Matrix 2 of 5**

Set Length Range for Matrix 2 of 5



0406030

Set the Minimum Length



0406040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

Check Digit Verification



0406050

Disable



0406060

**** Do Not Transmit Check Digit After Verification**



0406070

Transmit Check Digit After Verification



0006000
**** Exit Setup**



0006010
Enter Setup

Industrial 2 of 5

Restore Factory Defaults



0417000

Restore the Factory Defaults of Industrial 2 of 5

Enable/Disable Industrial 2 of 5



0417020

**** Enable Industrial 2 of 5**



0417010

Disable Industrial 2 of 5

Set Length Range for Industrial 2 of 5



0417030

Set the Minimum Length



0417040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

Check Digit Verification



0417050

**** Disable**



0417070

Transmit Check Digit After Verification



0417060

Do Not Transmit Check Digit After Verification



0006000
**** Exit Setup**



0006010
Enter Setup

Standard 2 of 5 (IATA 2 of 5)

Restore Factory Defaults



0418000

Restore the Factory Defaults of Standard 25

Enable/Disable Standard 25



0418020

**** Enable Standard 25**



0418010

Disable Standard 25

Set Length Range for Standard 25



0418030

Set the Minimum Length



0418040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

Check Digit Verification



0418050

**** Disable**



0418070

Transmit Check Digit After Verification



0418060

Do Not Transmit Check Digit After Verification



0006000
**** Exit Setup**



0006010
Enter Setup

Code 39

Restore Factory Defaults



0408000

Restore the Factory Defaults of Code 39

Enable/Disable Code 39



0408020

**** Enable Code 39**



0408010

Disable Code 39

Transmit Start/Stop Character



0408090

Transmit Start/Stop Character



0408080

**** Do not Transmit Start/Stop Character**



0006000

**** Exit Setup**



0006010
Enter Setup

Set Length Range for Code 39



0408030

Set the Minimum Length



0408040

 
Set the Maximum Length

Check Digit Verification



0408050

**** Disable**



0408070

Transmit Check Digit After Verification



0408060

Do Not Transmit Check Digit After Verification

Enable/Disable Code 39 Full ASCII

The RT230H/RT236 can be configured to identify all ASCII characters by scanning the appropriate barcode below.



0408110

**** Enable Code 39 Full ASCII**



0408100

Disable Code 39 Full ASCII



0006000
**** Exit Setup**



0006010
Enter Setup



0006000
**** Exit Setup**



0006010
Enter Setup

Codabar

Restore Factory Defaults



0409000

Restore the Factory Defaults of Codabar

Enable/Disable Codabar



0409020

** Enable Codabar



0409010

Disable Codabar

Set Length Range for Codabar



0409030

Set the Minimum Length



0409040

Set the Maximum Length



0006000
** Exit Setup



0006010
Enter Setup

Check Digit Verification



0409050
**** Disable**



0409070
Transmit Check Digit After Verification



0409060
Do Not Transmit Check Digit After Verification

Transmit Start/Stop Character



0409090
Transmit Start/Stop Character



0409080
**** Do not Transmit Start/Stop Character**



0006000
**** Exit Setup**



0006010
Enter Setup

Start/Stop Character Format

You can choose your desired start/stop character format by scanning the appropriate barcode below.



0409100

**** ABCD/ABCD as the Start/Stop Character**



0409110

ABCD/TN*E as the Start/Stop Character



0409120

Start/Stop Character in Uppercase



0409130

Start/Stop Character in Lowercase



0006000
**** Exit Setup**



0006010
Enter Setup

Code 93

Restore Factory Defaults



0410000

Restore the Factory Defaults of Code 93

Enable/Disable Code 93



0410020

**** Enable Code 93**



0410010

Disable Code 93

Set Length Range for Code 93



0410030

Set the Minimum Length



0410040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

Check Digit Verification



0410050

Disable



0410060

**** Do Not Transmit Check Digit After Verification**



0410070

Transmit Check Digit After Verification



0006000
**** Exit Setup**



0006010
Enter Setup

GS1-Databar (RSS)

Restore Factory Defaults



0413000

Restore the Factory Defaults of GS1-Databar

Enable/Disable GS1 Databar



0413020

**** Enable GS1-DataBar**



0413010

Disable GS1-DataBar

Transmit Application Identifier "01"



0413060

**** Transmit Application Identifier "01"**



0413050

Do Not Transmit Application Identifier "01"



0006000

**** Exit Setup**



0006010
Enter Setup

Code 11

Restore Factory Defaults



0415000

Restore the Factory Defaults of Code 11

Enable/Disable Code 11



0415020

**** Enable Code 11**



0415010

Disable Code 11

Set Length Range for Code 11



0415030

Set the Minimum Length



0415040

Set the Maximum Length



0006000
**** Exit Setup**



0006010
Enter Setup

Transmit Check Digit



0415120
Transmit Check Digit



0415110
**** Do Not Transmit Check Digit**

Check Digit Verification



0415050
Disable



0415060
**** One Check Digit, MOD11**



0415070
Two Check Digits, MOD11/MOD11



0415080
Two Check Digits, MOD11/MOD9



0415090
**One Check Digit, MOD11 (Len<=10)
Two Check Digits, MOD11/MOD11 (Len>10)**



0415100
**One Check Digit, MOD11 (Len<=10)
Two Check Digits, MOD11/MOD9 (Len>10)**



0006000
**** Exit Setup**



0006010
Enter Setup

Plessey

Restore Factory Defaults



0419000

Restore the Factory Defaults of Plessey

Enable/Disable Plessey



0419020

** Enable Plessey



0419010

Disable Plessey

Set Length Range for Plessey



0419030

Set the Minimum Length



0419040

Set the Maximum Length



0006000
** Exit Setup



0006010
Enter Setup

Check Digit Verification



0419050
Disable



0419060

**** Do Not Transmit Check Digit After Verification**



0419070

Transmit Check Digit After Verification



0006000
**** Exit Setup**



0006010
Enter Setup

MSI-Plessey

Restore Factory Defaults



0420000

Restore the Factory Defaults of MSI-Plessey

Enable/Disable MSI-Plessey



0420020

** Enable MSI-Plessey



0420010

Disable MSI-Plessey

Set Length Range for MSI-Plessey



0420030

Set the Minimum Length



0420040

Set the Maximum Length



0006000
** Exit Setup



0006010
Enter Setup

Transmit Check Digit



0420100
Transmit Check Digit



0420090
**** Do Not Transmit Check Digit**

Check Digit Verification



0420050
Disable



0420060
**** One Check Digit, MOD10**



0420070
Two Check Digits, MOD10/MOD10



0420080
Two Check Digits, MOD10/MOD11



0006000
**** Exit Setup**



0006010
Enter Setup

2D Symbologies

PDF 417

Restore Factory Defaults



Restore the Factory Defaults of PDF 417

Enable/Disable PDF 417



** Enable PDF 417



Disable PDF 417

Set Length Range for PDF 417



Set the Minimum Length



Set the Maximum Length



0006000
** Exit Setup



0006010
Enter Setup

PDF 417 Twin Code

PDF417 twin code is 2 PDF417 barcodes paralleled vertically or horizontally. Two of them must have the same direction and similar specifications and be placed closely together.

There are 3 options for reading PDF417 twin codes:

Single PDF417 Only: Read either PDF417 code.

Twin PDF417 Only: Read both PDF417 codes.

Both Single & Twin: Read both PDF417 codes. If successful, transmit as twin PDF417 only. Otherwise, try single PDF417 only.



0501070
**** Single PDF417 Only**



0501080
Twin PDF417 Only



0501090
Both Single & Twin

Transmission order of twin code

Order 1: Transmit the one containing more information first.

Order 2: Transmit the one containing less information first.



0501110
**** Order 1**



0501100
Order 2



0006000
**** Exit Setup**



QR Code

Restore Factory Defaults



Restore the Factory Defaults of QR Code

Enable/Disable QR Code



** Enable QR Code



Disable QR Code

Set Length Range for QR Code



Set the Minimum Length



Set the Maximum Length

Micro QR



** Enable Micro QR



Disable Micro QR





0006010
Enter Setup

QR Twin Code

QR twin code is 2 QR barcodes paralleled vertically or horizontally. Two of them must have the same direction and similar specifications and be placed closely together.

There are 3 options for reading QR twin codes:

Single QR Only: Read either QR code.

Twin QR Only: Read both QR codes.

Both Single & Twin: Read both QR codes. If successful, transmit as twin QR only. Otherwise, try single QR only.



0502070
**** Single QR Only**



0502080
Twin QR Only



0502090
Both Single & Twin



0006000
**** Exit Setup**



0006010
Enter Setup

Transmission order of twin code

Order 1: Transmit the one containing more information first.

Order 2: Transmit the one containing less information first.

Order 3: If the twin code is paralleled horizontally, transmit the one on the left first; if it is paralleled vertically, transmit the one in the upper position first.



0502140

Order 1



0502130

Order 2



0502120

**** Order 3**



0006000
**** Exit Setup**



0006010
Enter Setup

Data Matrix

Restore Factory Defaults



0504000

Restore the Factory Defaults of Data Matrix

Enable/Disable Data Matrix



0504020

**** Enable Data Matrix**



0504010

Disable Data Matrix

Set Length Range for Data Matrix



0504030

Set the Minimum Length



0504040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

Rectangular Barcode



0504110

**** Enable Rectangular Barcode**



0504100

Disable Rectangular Barcode

Mirror Image



0504331

**** Decode Mirror Images**



0504330

Do Not Decode Mirror Images



0006000
**** Exit Setup**



0006010
Enter Setup

Data Matrix Twin Code

Data Matrix twin code is 2 Data Matrix barcodes paralleled vertically or horizontally. Two of them must have the same direction and similar specifications and be placed closely together.

There are 3 options for reading Data Matrix twin codes:

Single Data Matrix Only: Read either Data Matrix code.

Twin Data Matrix Only: Read both Data Matrix codes. Transmission order: Data Matrix code on the left (in the upper position) followed by the one on the right (in the lower position).

Both Single & Twin: Read both Data Matrix codes. If successful, transmit as twin Data Matrix only. Otherwise, try single Data Matrix only.



0504070

**** Single Data Matrix Only**



0504080

Twin Data Matrix Only



0504090

Both Single & Twin



0006000

**** Exit Setup**



0006010
Enter Setup

Chinese Sensible Code

Restore Factory Defaults



Restore the Factory Defaults of Chinese Sensible Code

Enable/Disable Chinese Sensible Code



Enable Chinese Sensible Code



**** Disable Chinese Sensible Code**

Set Length Range for Chinese Sensible Code



Set the Minimum Length



Set the Maximum Length



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 9 Image Control

Ambient Illumination

Ambient lighting conditions may vary from one operating environment to another, such as fluorescent lit warehouses or sunlit open spaces. Fluorescent lights may flicker when using AC power source in 50-60Hz. Usually indoor illuminance is around 1,000 lux while outdoor illuminance may reach 60,000 lux or even over 100,000 lux.

Two options are provided for ambient illumination settings:

Normal Illuminance: applicable to most indoor/outdoor environments.

High Illuminance: applicable to special environments with super-intense light source.

Change to this settings will not take effect until the RT230H/RT236 reboots or wakes up from sleep.



0313150

**** Normal Illuminance (0~60000lux)**



0313151

High Illuminance (60000~120000lux)



0006000

**** Exit Setup**



0006010
Enter Setup

Image Flipping

The user may get reversed images when the RT230H/RT236 is installed in non-standard ways. When it happens, image flipping can be used to right the “wrong”.

The following figures illustrate standard image and three flipped images.

- ✧ Fig.8-1 Standard Image: Image the RT230H/RT236 should get when it is installed properly and no reflector is used in its optical imaging system.
- ✧ Fig.8-2 Horizontal Flipped Image: It happens when horizontal reflection occurs along the optical path. To get standard images, enable the **Flip Horizontally** option.
- ✧ Fig.8-3 Vertical Flipped Image: It happens when vertical reflection occurs along the optical path. To get standard images, enable the **Flip Vertically** option.
- ✧ Fig.8-4 Horizontal and Vertical Flipped Image: It happens when the RT230H/RT236 is installed upside down. To get standard images, enable the **Flip Horizontally and Vertically** option.



Fig.8-1 Standard Image



Fig.8-2 Horizontal Flipped Image



Fig.8-3 Vertical Flipped Image



Fig.8-4 Horizontal and Vertical Flipped Image



0006000
** Exit Setup



0006010
Enter Setup

Flip



0202000
**** Do Not Flip**



0202030
Flip Vertically



0202031
Flip Horizontally



0202032
Flip Horizontally and Vertically

Flip Vertically



0202033
Flip Vertically



0202034
Do Not Flip Vertically

Flip Horizontally



0202035
Flip Horizontally



0202036
Do Not Flip Horizontally



0006000
**** Exit Setup**

Chapter 10 Troubleshooting

FAQ

Problem: Some barcodes cannot be read.

Solution:

1. Find out the barcode type and verify that the barcode type is enabled. If the barcode parameters include check digit verification, select the Disable option.
2. If you do not know the barcode type, enable all symbologies.
3. If they are inverse barcodes (bright images on a dark background), enable the Video Reverse feature.

Problem: Incorrect output.

Solution:

1. If this problem happens to all barcodes and additional characters appear before/after barcode data, disable all prefix/suffix.
2. If this problem only happens to some barcodes and matches one of the following situations:
 - a) incomplete barcode data: Enable the check digit verification.
 - b) both the first and last characters are asterisks (*): Disable the transmission of start/stop characters of Code 39.
 - c) "a" transmitted as "+A": Enable Code 39 Full ASCII.

Problem: Barcodes can be read, but cannot be displayed.

Solution: Verify that the serial port parameter (such as baud rate, data bit and stop bit) settings match the host requirements.

Problem: Illumination and aiming beams are OFF.

Solution:

1. Verify that the RT230H/RT236 is properly powered up.
2. Send “?” to the RT230H/RT236. If the RT230H/RT236 returns a reply of “!”, then send programming commands to turn on illumination and aimer.

Problem: Carriage Return/Line Feed settings.

Solution: See the “**Terminating Character Suffix**” section in Chapter 7.

Appendix

Appendix 1: Factory Defaults Table

Parameter	Factory Default	Remark	
Programming Barcode			
Barcode Programming	Disabled		
Programming Barcode Data	Do not send		
Communication Settings			
RS232	Baud Rate	9600	
	Parity Check	None	
	Data Bit	8	
	Stop Bit	1	
	Hardware Flow Control	No flow control	
HID-KBW (optional)	USB Country Keyboard Type	U.S.	
	Convert Case	No conversion	
	Inter-Keystroke Delay	No delay	
	Beep on Unknown Character	Do not beep	
	Emulate ALT + Keypad	Disabled	
	Function Key Mapping	Disabled	
	Emulate Numeric Keypad	Disabled	
Code Page	Windows 1252 (Latin I)		
Scan Mode			
Default Scan Mode	Sense mode	Options: Batch mode, Trigger mode, Sense mode, Continuous mode.	
Trigger Mode	Decode Session Timeout	3,000ms	Applicable to a Trigger mode, Sense mode, Continuous mode. 0~3,600,000ms
	Trigger Condition	Electric level	
	Auto Sleep	Enabled	
	Time Period from Idle to Sleep	500ms	0~65,535ms
	Timeout between Decodes (Same Barcode)	Disabled 1,500ms	 0~65,535ms

Parameter		Factory Default	Remark
Sense Mode	Decode Session Timeout	3,000ms	Applicable to Trigger mode, Sense mode, Continuous mode. 0~3,600,000ms
	Image Stabilization Timeout	500ms	0~1,600ms
	Operation after Good Read	Pause after good read	
	Timeout between Decodes (Same Barcode)	Disabled 1,500ms	0~65,535ms
	Threshold Value of Illumination Change	2	1~20
Continuous Mode	Decode Session Timeout	3,000ms	Applicable to Trigger mode, Sense mode, Continuous mode. 0~3,600,000ms
	Timeout between Decodes	1000ms	0~65,535ms
Cellphone Read Mode		Disabled	
Scanning Preferences			
Decode Area		Whole Area Decoding	
Central Area		20%	
Illumination & Aiming			
Illumination		Normal	
Aiming		Normal	
Beep & LED Notifications			
Startup Beep		Enabled	
Good Read Beep for Non-Programming Barcode	Notification	Enabled	
	Beep Type	Type 3	
	Beep Volume	Loud	
Good Read Beep for Programming Barcode		Enabled	
Good Read LED		Enabled	
NGR (Not Good Read) Message		Do not transmit	
		None	

Parameter	Factory Default	Remark
Data Formatting		
Prefix Sequence	Custom Prefix+Code ID+AIM ID	
Custom Prefix	Disabled	
	None	
AIM ID Prefix	Disabled	
Code ID Prefix	Disabled	
Custom Suffix	Disabled	
	None	
Terminating Character Suffix	Enabled	
	0x0D	Carriage Return
Image Control		
Ambient Illumination	Normal illuminance	
Image Flipping	Do not flip	

Parameter	Factory Default	Remark
Symbologies		
Video Reverse	Disabled	Applicable to all symbologies.
Code 128		
Code 128	Enabled	
Maximum Length	127	
Minimum Length	1	
GS1-128 (UCC/EAN-128)		
GS1-128	Enabled	
Maximum Length	127	
Minimum Length	1	
AIM-128		
AIM-128	Enabled	
Maximum Length	127	
Minimum Length	1	
EAN-8		
EAN-8	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to EAN-13	Disabled	
EAN-13		
EAN-13	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
ISSN		
ISSN	Disabled	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	

Parameter	Factory Default	Remark
ISBN		
ISBN	Enabled	
ISBN Format	ISBN-13	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
UPC-E		
UPC-E	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to UPC-A	Disabled	
System Character "0"	Transmit	
UPC-A		
UPC-A	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Preamble Character "0"	Do not transmit	
Interleaved 2 of 5		
Interleaved 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Maximum Length	100	
Minimum Length	6	
ITF-6		
ITF-6	Disabled	
Check Digit	Do not transmit	

Parameter	Factory Default	Remark
ITF-14		
ITF-14	Enabled	
Check Digit	Do not transmit	
Matrix 2 of 5		
Matrix 2 of 5	Disabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	6	
Industrial 2 of 5		
Industrial 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	6	
Standard 2 of 5		
Standard 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	6	
Code 39		
Code 39	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Character	Do not transmit	
Code 39 Full ASCII	Enabled	
Maximum Length	127	
Minimum Length	1	

Parameter	Factory Default	Remark
Codabar		
Codabar	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Character	Do not transmit	
Start/Stop Character Format	ABCD/ABCD	
Maximum Length	127	
Minimum Length	1	
Code 93		
Code 93	Enabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	3	
GS1 Databar		
GS1 Databar	Enabled	
Application Identifier "01"	Transmit	
Code 11		
Code 11	Enabled	
Check Digit Verification	One check digit, MOD11	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	2	
Plessey		
Plessey	Enabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	1	

Parameter	Factory Default	Remark
MSI-Plessey		
MSI-Plessey	Enabled	
Check Digit Verification	One check digit, MOD10	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	2	
PDF 417		
PDF 417	Enabled	
Maximum Length	2710	
Minimum Length	1	
PDF 417 Twin Code	Read single PDF417 only	
Transmission Order of Twin Code	Order 1	
QR Code		
QR Code	Enabled	
Micro QR	Enabled	
Maximum Length	7089	
Minimum Length	1	
QR Twin Code	Read single QR only	
Transmission Order of Twin Code	Order 3	
Data Matrix		
Data Matrix	Enabled	
Rectangular Barcode	Enabled	
Mirror Image	Decode	
Maximum Length	3116	
Minimum Length	1	
DM Twin Code	Read single DM only	
Chinese Sensible Code		
Chinese Sensible Code	Disabled	
Maximum Length	7827	
Minimum Length	1	

Appendix 2: AIM ID Table

Symbology	AIM ID	Remark
EAN-13]E0	Standard EAN-13
]E3	EAN-13 + 2/5-Digit Add-On Code
EAN-8]E4	Standard EAN-8
]E4...]E1...	EAN-8 + 2-Digit Add-On Code
]E4...]E2...	EAN-8 + 5-Digit Add-On Code
UPC-E]E0	Standard UPC-E
]E3	UPC-E + 2/5-Digit Add-On Code
UPC-A]E0	Standard UPC-A
]E3	UPC-A + 2/5-Digit Add-On Code
Code 128]C0	Standard Code 128
GS1-128 (UCC/EAN-128)]C1	FNC1 is the character right after the start character
AIM-128]C2	FNC1 is the 2nd character after the start character
ISBT-128]C4	
Interleaved 2 of 5]I0	No check digit verification
]I1	Transmit check digit after verification
]I3	Do not transmit check digit after verification
ITF-6]I1	Transmit check digit
]I3	Do not transmit check digit
ITF-14]I1	Transmit check digit
]I3	Do not transmit check digit
Industrial 2 of 5]S0	Not specified
Standard 2 of 5]R0	No check digit verification
]R8	One check digit, MOD10; do not transmit check digit
]R9	One check digit, MOD10; transmit check digit
Code 39]A0	Transmit barcodes as is; Full ASCII disabled; no check digit verification
]A1	One check digit, MOD43; transmit check digit
]A3	One check digit, MOD43; do not transmit check digit
]A4	Full ASCII enabled; no check digit verification
]A5	Full ASCII enabled; transmit check digit
]A7	Full ASCII enabled; do not transmit check digit
Codabar]F0	Standard Codabar
]F2	Transmit check digit after verification
]F4	Do not transmit check digit after verification

Symbology	AIM ID	Remark
Code 93]G0	Standard Code 93
Code 11]H0	One check digit, MOD11; transmit check digit
]H1	Two check digits, MOD11/MOD11; transmit check digit
]H3	Do not transmit check digit after verification
]H9	No check digit verification
GS1-DataBar (RSS)]e0	Standard GS1-DataBar
Plessey]P0	Standard Plessey
MSI-Plessey]M0	One check digit, MOD10; transmit check digit
]M1	One check digit, MOD10; do not transmit check digit
]M8	Two check digits
]M9	No check digit verification
Matrix 2 of 5]X0	Specified by the manufacturer
]X1	No check digit verification
]X2	One check digit, MOD10; transmit check digit
]X3	One check digit, MOD11; do not transmit check digit
ISBN]X4	Standard ISBN
ISSN]X5	Standard ISSN
PDF417]L0	Comply with 1994 PDF417 specifications
Data Matrix]d0	ECC000 - ECC140
]d1	ECC200
]d2	ECC200, FNC1 is the 1st or 5th character after the start character
]d3	ECC200, FNC1 is the 2nd or 6th character after the start character
]d4	ECC200, ECI included
]d5	ECC200, FNC1 is the 1st or 5th character after the start character, ECI included
]d6	ECC200, FNC1 is the 2nd or 6th character after the start character, ECI included
QR Code]Q0	QR1
]Q1	2005 version, ECI excluded
]Q2	2005 version, ECI included
]Q3	QR Code 2005, ECI excluded, FNC1 is the 1st character after the start character
]Q4	QR Code 2005, ECI included, FNC1 is the 1st character after the start character
]Q5	QR Code 2005, ECI excluded, FNC1 is the 2nd character after the start character
]Q6	QR Code 2005, ECI included, FNC1 is the 2nd character after the start character
Chinese Sensible Code]X0	

Reference: ISO/IEC 15424:2008 Information technology – Automatic identification and data capture techniques – Data Carrier Identifiers (including Symbology Identifiers).

Appendix 3: Code ID Table

Symbology	Code ID
Code 128	j
GS1-128(UCC/EAN-128)	j
AIM-128	f
EAN-8	d
EAN-13	d
ISSN	n
ISBN	B
UPC-E	c
UPC-A	c
Interleaved 2 of 5	e
ITF-6	e
ITF-14	e
Matrix 2 of 5	v
Industrial 2 of 5	D
Standard 2 of 5	s
Code 39	b
Codabar	a
Code 93	i
Code 11	H
Plessey	p
MSI-Plessey	m
GS1 Databar	R
PDF417	r
QR Code	Q
Data Matrix	u
Chinese Sensible Code	h

Appendix 4: ASCII Table

Hex	Dec	Char
00	0	NUL (Null char.)
01	1	SOH (Start of Header)
02	2	STX (Start of Text)
03	3	ETX (End of Text)
04	4	EOT (End of Transmission)
05	5	ENQ (Enquiry)
06	6	ACK (Acknowledgment)
07	7	BEL (Bell)
08	8	BS (Backspace)
09	9	HT (Horizontal Tab)
0a	10	LF (Line Feed)
0b	11	VT (Vertical Tab)
0c	12	FF (Form Feed)
0d	13	CR (Carriage Return)
0e	14	SO (Shift Out)
0f	15	SI (Shift In)
10	16	DLE (Data Link Escape)
11	17	DC1 (XON) (Device Control 1)
12	18	DC2 (Device Control 2)
13	19	DC3 (XOFF) (Device Control 3)
14	20	DC4 (Device Control 4)
15	21	NAK (Negative Acknowledgment)
16	22	SYN (Synchronous Idle)
17	23	ETB (End of Trans. Block)
18	24	CAN (Cancel)
19	25	EM (End of Medium)
1a	26	SUB (Substitute)
1b	27	ESC (Escape)
1c	28	FS (File Separator)
1d	29	GS (Group Separator)

Hex	Dec	Char
1e	30	RS (Request to Send)
1f	31	US (Unit Separator)
20	32	SP (Space)
21	33	! (Exclamation Mark)
22	34	" (Double Quote)
23	35	# (Number Sign)
24	36	\$ (Dollar Sign)
25	37	% (Percent)
26	38	& (Ampersand)
27	39	` (Single Quote)
28	40	((Right / Closing Parenthesis)
29	41) (Right / Closing Parenthesis)
2a	42	* (Asterisk)
2b	43	+ (Plus)
2c	44	, (Comma)
2d	45	- (Minus / Dash)
2e	46	. (Dot)
2f	47	/ (Forward Slash)
30	48	0
31	49	1
32	50	2
33	51	3
34	52	4
35	53	5
36	54	6
37	55	7
38	56	8
39	57	9
3a	58	: (Colon)
3b	59	; (Semi-colon)
3c	60	< (Less Than)
3d	61	= (Equal Sign)

Hex	Dec	Char
3e	62	> (Greater Than)

3f	63	? (Question Mark)
40	64	@ (AT Symbol)
41	65	A
42	66	B
43	67	C
44	68	D
45	69	E
46	70	F
47	71	G
48	72	H
49	73	I
4a	74	J
4b	75	K
4c	76	L
4d	77	M
4e	78	N
4f	79	O
50	80	P
51	81	Q
52	82	R
53	83	S
54	84	T
55	85	U
56	86	V
57	87	W
58	88	X
59	89	Y
5a	90	Z
5b	91	[(Left / Opening Bracket)
5c	92	\ (Back Slash)
5d	93] (Right / Closing Bracket)

Hex	Dec	Char
5e	94	^ (Caret / Circumflex)
5f	95	_ (Underscore)
60	96	' (Grave Accent)

61	97	A
62	98	b
63	99	C
64	100	D
65	101	E
66	102	F
67	103	G
68	104	H
69	105	I
6a	106	J
6b	107	K
6c	108	L
6d	109	M
6e	110	N
6f	111	O
70	112	P
71	113	Q
72	114	R
73	115	S
74	116	T
75	117	U
76	118	V
77	119	W
78	120	X
79	121	Y
7a	122	Z
7b	123	{ (Left/ Opening Brace)
7c	124	(Vertical Bar)
7d	125	} (Right/Closing Brace)
7e	126	~ (Tilde)
7f	127	DEL (Delete)

Appendix 5: Parameter Programming Examples

The following examples show you how to program parameters by scanning programming barcodes.

a. Program the Decode Session Timeout

Example: Set the decode session timeout to 1500ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode. (See the “**Decode Session Timeout**” section in Chapter 3)
3. Scan the numeric barcodes “1”, “5”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

b. Program the Time Period from Idle to Sleep

Example: Set the time period from idle to sleep to 500ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Time Period from Idle to Sleep** barcode. (See the “**Auto Sleep**” section in Chapter 3)
3. Scan the numeric barcodes “5”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

c. Program the Image Stabilization Timeout

Example: Set the image stabilization timeout to 500ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Image Stabilization Timeout** barcode. (See the “**Image Stabilization Timeout**” section in Chapter 3)
3. Scan the numeric barcodes “5”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

d. Program the Timeout between Decodes (Same Barcode)

Example: Set the timeout between decodes (same barcode) to 1000ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes (Same Barcode)** barcode. (See the “**Timeout between Decodes (Same Barcode)**” section in Chapter 3)
3. Scan the numeric barcodes “1”, “0”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

e. Program the Threshold Value of Illumination Change

Example: Set the threshold value of illumination change to 4

1. Scan the **Enter Setup** barcode.
2. Scan the **Threshold Value of Illumination Change** barcode. (See the “**Sensitivity**” section in Chapter 3)
3. Scan the numeric barcode “4”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

f. Program the Timeout between Decodes

Example: Set the timeout between decodes to 500ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes** barcode. (See the “**Timeout between Decodes**” section in Chapter 3)
3. Scan the numeric barcodes “5”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

g. Program the Central Area

Example: Set the percentage of central area to 20%

1. Scan the **Enter Setup** barcode.
2. Scan the **Specify Central Area** barcode.
3. Scan the numeric barcodes “2” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

h. Program the Custom Prefix/Suffix

Example: Set the custom prefix to “CODE”

1. Check the hex values of “CODE” in the ASCII Table. (“CODE”: 43, 4F, 44, 45)
2. Scan the **Enter Setup** barcode.
3. Scan the **Set Custom Prefix** barcode. (See the “**Set Custom Prefix**” section in Chapter 6)
4. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

i. Program the Terminating Character Suffix

Example: Set the terminating character suffix to 0x0D

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Terminating Character Suffix** barcode. (See the “**Set Terminating Character Suffix**” section in Chapter 6)
3. Scan the numeric barcodes “0” and “D”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

j. Program the Code ID

Example: Set the Code ID of PDF 417 to “p”

1. Check the hex value of “p” in the ASCII Table. (“p”: 70)
2. Scan the **Enter Setup** barcode.
3. Scan the **Modify PDF417 Code ID** barcode. (See the “**Modify Code ID**” section in Chapter 6)
4. Scan the numeric barcodes “7” and “0”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

k. Program the NGR Message

Example: Set the NGR message to “!ERR”

1. Check the hex values of “!ERR” in the ASCII Table. (“!ERR”: 21, 45, 52, 52)
2. Scan the **Enter Setup** barcode.
3. Scan the **Edit NGR Message** barcode. (See the “**Edit NGR Message**” section in Chapter 5)
4. Scan the numeric barcodes “2”, “1”, “4”, “5”, “5”, “2”, “5” and “2”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

1. Program the Length Range (Maximum/Minimum Lengths) for a Symbology

Note: If minimum length is set to be greater than maximum length, the RT230H/RT236 only decodes barcodes with either the minimum or maximum length. If you only want to read barcodes with a specific length, set both minimum and maximum lengths to be that desired length.

Example: Set the RT230H/RT236 to decode Code 128 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode. (See the “**Set Length Range for Code 128**” section in Chapter 7)
3. Scan the numeric barcode “8”.
4. Scan the **Save** barcode.
5. Scan the **Set the Maximum Length** barcode. (See the “**Set Length Range for Code 128**” section in Chapter 7)
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

m. Program the Code Page

Example: Set the code page to Windows 1251 (Cyrillic)

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Code Page** barcode. (See the “**Code Page**” section in Chapter 2)
3. Scan the numeric barcode “1”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

Appendix 6: Digit Barcodes (numeric barcodes)

0-9



0



5



1



6



2



7



3



8



4



9

A-F



A



B



C



D



E



F

Appendix 7: Save/Cancel Barcodes

After reading numeric barcode(s), you need to scan the **Save** barcode to save the data. If you scan the wrong digit(s), you can either scan the **Cancel** barcode and then start the configuration all over again, or scan the **Delete the Last Digit** barcode and then the correct digit, or scan the **Delete All Digits** barcode and then the digits you want.

For instance, after reading the **Maximum Length** barcode and numeric barcodes “1”, “2” and “3”, you scan:

- ✧ **Delete the Last Digit:** The last digit “3” will be removed.
- ✧ **Delete All Digits:** All digits “123” will be removed.
- ✧ **Cancel:** The maximum length configuration will be cancelled. And the RT230H/RT236 is still in the setup mode.



0000160

Save



0000170

Delete the Last Digit



0000180

Delete All Digits



0000190

Cancel

Appendix 8: ASCII Function Key Mapping Table

ASCII Function	ASCII Value (HEX)	No Function Key Mapping	Function Key Mapping
NUL (Null char.)	00	Null	Ctrl+Z
SOH (Start of Header)	01	Keypad Enter	Ctrl+A
STX (Start of Text)	02	Caps Lock	Ctrl+B
ETX (End of Text)	03	Null	Ctrl+C
EOT (End of Transmission)	04	Null	Ctrl+D
ENQ (Enquiry)	05	Null	Ctrl+E
ACK (Acknowledgment)	06	Null	Ctrl+F
BEL (Bell)	07	Enter	Ctrl+G
BS (Backspace)	08	Left Arrow	Ctrl+H
HT (Horizontal Tab)	09	Horizontal Tab	Ctrl+I
LF (Line Feed)	0A	Down Arrow	Ctrl+J
VT (Vertical Tab)	0B	Vertical Tab	Ctrl+K
FF (Form Feed)	0C	Backspace	Ctrl+L
CR (Carriage Return)	0D	Enter	Ctrl+M
SO (Shift Out)	0E	Insert	Ctrl+N
SI (Shift In)	0F	Esc	Ctrl+O
DLE (Data Link Escape)	10	F11	Ctrl+P
DC1 (XON) (Device Control 1)	11	Home	Ctrl+Q
DC2 (Device Control 2)	12	Print Screen	Ctrl+R
DC3 (XOFF) (Device Control 3)	13	Delete	Ctrl+S
DC4 (Device Control 4)	14	tab+shift	Ctrl+T
NAK (Negative Acknowledgment)	15	F12	Ctrl+U
SYN (Synchronous Idle)	16	F1	Ctrl+V
ETB (End of Trans. Block)	17	F2	Ctrl+W
CAN (Cancel)	18	F3	Ctrl+X
EM (End of Medium)	19	F4	Ctrl+Y
SUB (Substitute)	1A	F5	Ctrl+Z
ESC (Escape)	1B	F6	See the following table
FS (File Separator)	1C	F7	
GS (Group Separator)	1D	F8	
RS (Request to Send)	1E	F9	
US (Unit Separator)	1F	F10	

ASCII Function Key Mapping Table (Continued)

The function key mappings of the last five characters in the previous table differ from one keyboard layout to another.

Country/ Keyboard Layout	Function Key Mapping				
	1B	1C	1D	1E	1F
United States	Ctrl+[Ctrl+\	Ctrl+]	Ctrl+6	Ctrl+-
Belgium	Ctrl+[Ctrl+<	Ctrl+]	Ctrl+6	Ctrl+-
Scandinavia	Ctrl+8	Ctrl+<	Ctrl+9	Ctrl+6	Ctrl+-
France	Ctrl+^	Ctrl+8	Ctrl+\$	Ctrl+6	Ctrl+=
Germany		Ctrl+Ã	Ctrl++	Ctrl+6	Ctrl+-
Italy		Ctrl+\	Ctrl++	Ctrl+6	Ctrl+-
Switzerland		Ctrl+<	Ctrl+.	Ctrl+6	Ctrl+-
United Kingdom	Ctrl+[Ctrl+∅	Ctrl+]	Ctrl+6	Ctrl+-
Denmark	Ctrl+8	Ctrl+\	Ctrl+9	Ctrl+6	Ctrl+-
Norway	Ctrl+8	Ctrl+\	Ctrl+9	Ctrl+6	Ctrl+-
Spain	Ctrl+[Ctrl+\	Ctrl+]	Ctrl+6	Ctrl+-

Appendix 9: Code Pages List

Numeric Barcode Needed	Code Page
0	Windows 1252 (Latin I)
1	Windows 1251 (Cyrillic)



If need any technical support, feel free to contact our technical support department:
Support Department

.....
RTSCAN TECHNOLOGY LIMITED

Add: F/7, Block C, Ying Da Li Park, Futian Tax-Free Trade Zone, Shenzhen, China

Tel: +86-755-32909260

E-mail: support@rtscan.net